

To learn about other Suncast products, please call
1-855-477-1260 or 1-630-879-2050.




Product Feedback? Go To: Suncastcommercial.com/feedback
OR email us at: feedback@suncastcommercial.com

ITEM NUMBER: HKCHOOD


PARTS

HARDWARE

A

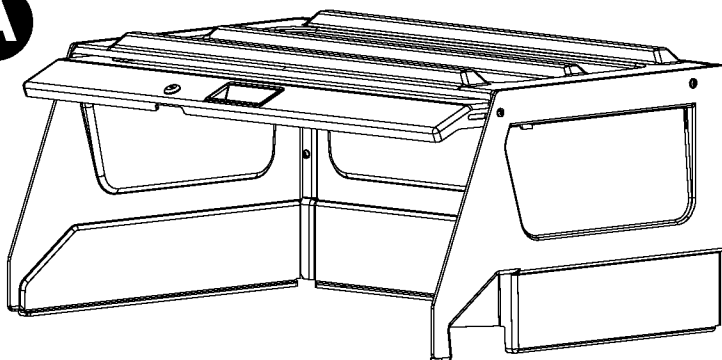


Hood Assembly

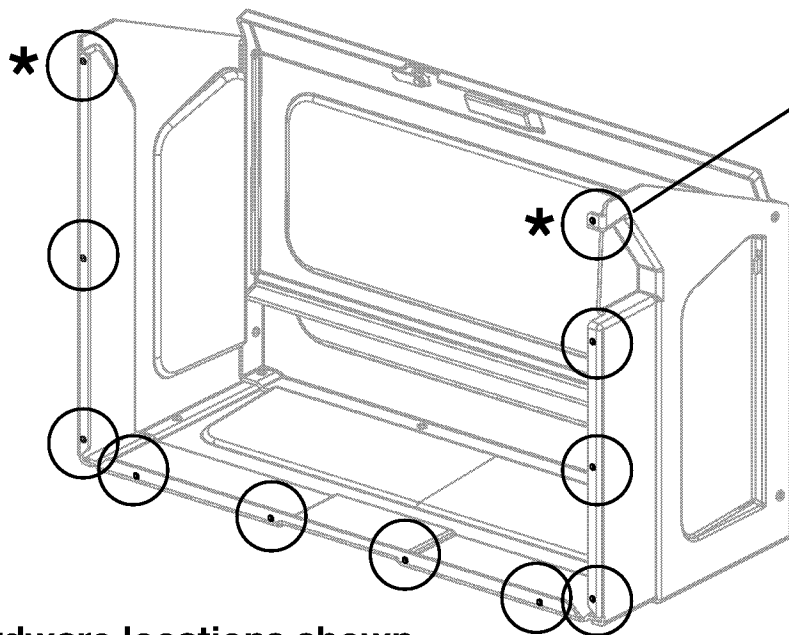

Hardware locations shown


0480427

B

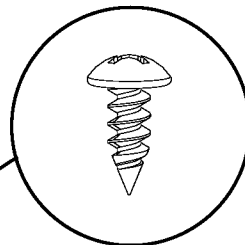



1/4" X 3/4"
x11

C


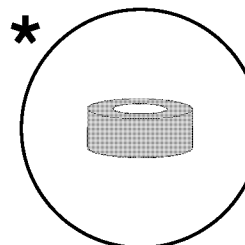


Spacer
x2

TOOLS NEEDED

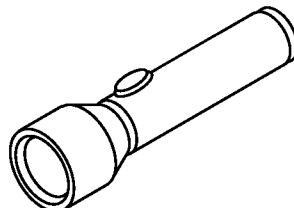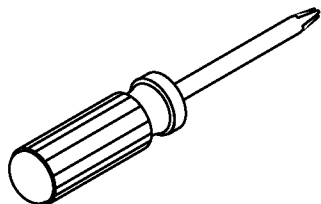

1

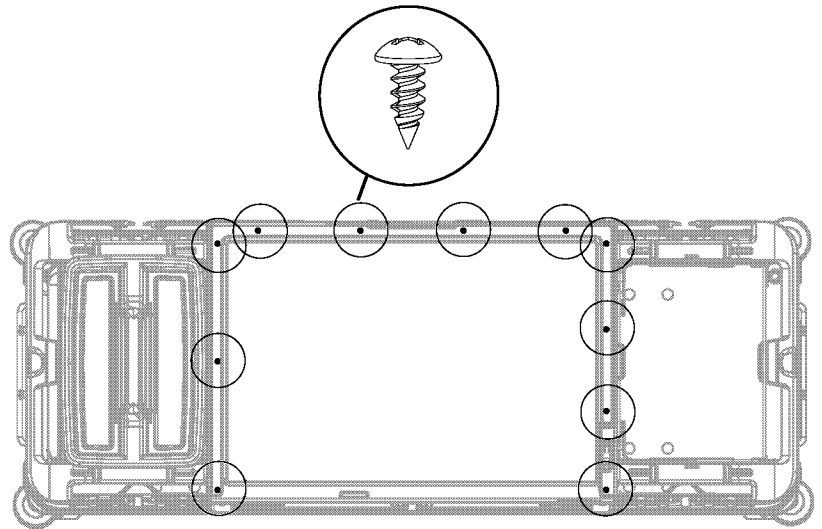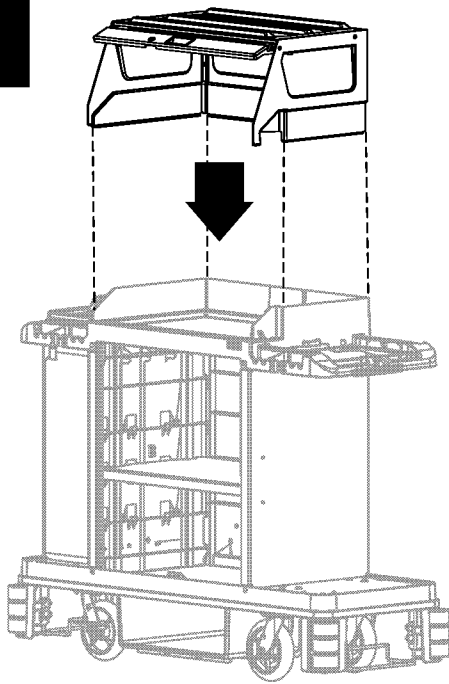


Top of cart showing 11 screw locations

Lower hood to top of cart.


2

Side screws

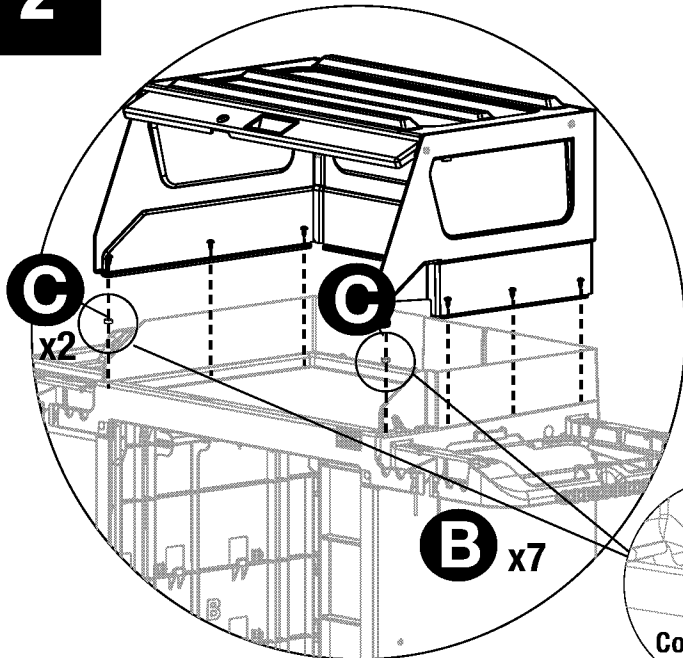

**Front
Corners only**

Back screws

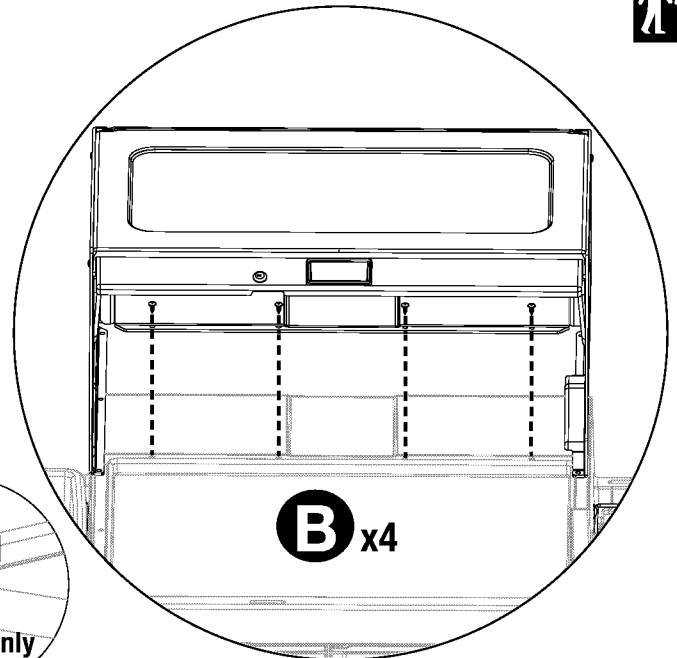

Slide bottom edge of hood down to inside edge of top of cart. Attach hood to cart using the eleven screws (B) provided. There will be three screws on the left side, four on the right side, and four across the back. To lock hood, first close hood, insert key and turn camlock clockwise.